



Surface Igniter

Installation Instructions

Replacement for GR407 Thru GR412
To Replace Flat Range Igniters

Caution: Turn off gas and electrical power to appliance before servicing.

Fragile: Handle with care. Broken igniters caused by mishandling will not be warranted.

Warning: Use this igniter to replace **ONLY** flat style igniters manufactured by Norton and used with Eaton NC4100 Series gas valves. Do not use as replacement for round range Carborundum/SiC igniters.

*****Do not attempt to modify this unit. Any modification to this unit will void the warranty*****

Instructions:

Note: Original brackets may be needed, do not discard.

1. Remove screws, which hold igniter to burner.
2. Disconnect wires.
3. Install new igniter.
4. Secure all screws and wire connections.
5. Check igniter operation and burner ignition.
6. On some Caloric Ranges it will be necessary to remove shield from old igniter and install it on replacement.

Important:

Surface Igniter will not be responsible for injury or property damage resulting from service performed by a none qualified service technician. If you perform service on your own product, you must assume responsibility for injury or damages, which may result..